
Emergency Procedures

In case a PRESSURE RELIEF BLOWS

- 1. Calmly move upwind of COUPP: towards the end of Drift J or towards the Cube Hall.
- 2. Guard Drift F between the air handlers and COUPP.
- 3. Inform the Lab Coordinator of the leak.
- 4. Observe the condition of the area if possible and await further instruction.

In case the EXPERIMENT IS DAMAGED

5. Turn off UPS by pushing power button on front panel

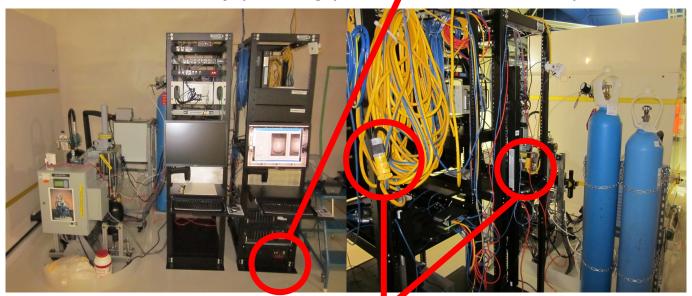

6. Pull both labelled 20A power cords from the rack, or turn off breakers 413PP23BR38 and 413PP23BR40

Contact:

Mike Crisler cell: (630) 276-8705, work: (630) 840-4099

Jeter Hall cell: (801) 735-7433, work: (630) 840-6660

v4 Mar 1, 2011